

HR1220 Receiver User Guide



Introduction

Thank you for choosing the Spectra Precision® HR1220 Laser Receiver from the Trimble® family of precision instruments. The HR1220 is a battery-operated laser receiver that detects a pulsed line laser beam and indicates its position relative to the beam using LCDs and audio signals.


Before using the receiver, be sure to read this user guide carefully. Included in it is information about setting up, using, and maintaining the receiver. Also included in this manual are **CAUTIONS** and **Notes**. Each of these words represents a level of danger or concern. A **CAUTION** indicates a hazard or unsafe practice that could result in minor injury or property damage. A **Note** indicates important information unrelated to safety.

Your comments and suggestions are welcome; please contact us at:

Trimble Inc.
5475 Kellenburger Road
Dayton, Ohio 45424 U.S.A.
Phone: (937) 245-5600
(888) 527-3771
FAX: (937) 245-5490
www.spectralasers.com


Features

- Power Switch** – turns the receiver ON and OFF
- LCD Backlight** – while ON, press to turn LCD backlight on; press again to turn off.
- Grade-Sensitivity Switch** – selects the receiver's on-grade sensitivity.
- Audio Switch** – Select beeper volume Loud, Low or Off
- Bubble vials** – aids in keeping receiver level in both horizontal and vertical planes.
- Photocell** – detects the laser beam when it strikes the receiver.
- Audio Port** – is the opening the sound comes out of.
- Liquid Crystal Display (LCD)** – displays the elevation, power, audio and battery status.

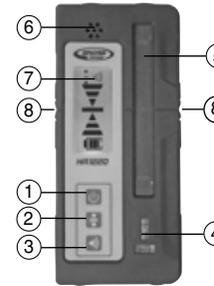

Features (cont.)

- Marking Notches** (both sides) – align with the on-grade portion of the photocell and are used to mark elevation readings. The marking notches are 60 mm (2.36 in.) from the top of the receiver.
- Captive Screw Thread** – for rod clamp attachment
- Rod Clamp Guides** – for rod clamp alignment
- Magnets** – holds the receiver on a wall molding, cross-T, runner, etc.
- Battery Housing** – holds 2 AA alkaline batteries.
- Battery Door Latch** – opens the battery compartment.

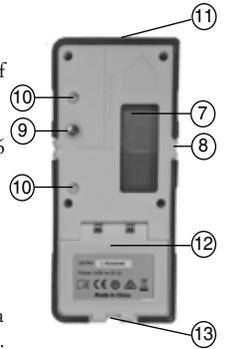

How to Use the Receiver

Installing/Removing the Batteries



- Release the battery door latch using your fingers, a coin, or a screwdriver. Open the door.
- Install/Remove the 2 AA batteries noting the positive (+) and negative (-) diagram on the bottom of the battery housing.
- Close the battery door and latch it shut.

Learning the Receiver Functions

Turning On/Off the Receiver

- Press the power switch to turn on the receiver.
Note: When the receiver is initially turned on or off, all LCD symbols and the audio signal are turned on for a brief period.
- If the LCD backlight is desired, press the power switch with the receiver on to turn on. Press again to turn off.
- Press and hold the power switch for one second to turn off the receiver.

Selecting the Audio Function


The receiver always starts up with the audio mode (loud) active.

- Press the audio switch repeatedly to cycle the audio level - loud, low or off.

Note: If the audio function is on, the receiver beeps quickly when the receiver is above the laser beam, slowly when below it, and continuously when centered in the laser beam or on grade.

Using the Receiver with a Laser

- Press the power switch to turn on the receiver. Also make sure the Receiver Mode indicator on the laser is ON (if not, press the RECEIVER button on the laser).
- Position the receiver so that its photocell faces the laser.
- Move the receiver up/down (or left/right for vertical applications) until the LCD show an on-grade reading.
Note: The LCD shows a down arrow when the receiver is above the laser beam, an up arrow when below it, and a horizontal line when centered in the laser beam.

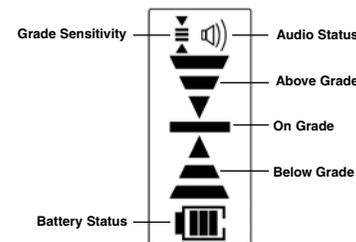


LCD/Audio Information

LCD Readout	Function		Audio Output
Down arrow	High	▼	Fast beeping tone
Center bar	On-grade	—	Continuous tone
Up arrow	Low	▲	Slow beeping tone
Fine Sensitivity	±1.0 mm (1/16 in.)	▼▲	N/A
Coarse Sensitivity	±2.0 mm (1/8 in.)	▼▲▲	N/A
Battery	Low battery	🔋	N/A
Beeper	Audio Loud	🔊	Loud
	Audio Low	🔊	Low
	Audio Off		None

General-Purpose Clamp

The clamp (PN 1277-8110) allows the receiver to be attached to a survey rod or wooden pole.

1. Captive Rod Clamp Screw - attaches to the back of receiver.
2. Alignment Points (2) - help secure and align rod clamp.
3. Clamping Screw Knob - secures clamp to rods by moving the traveling jaw. Clockwise tightens; Counterclockwise loosens.
4. Traveling Jaw - moving jaw grips tightly to rods.
5. Reading Edge - aligns with the receiver's on-grade location.

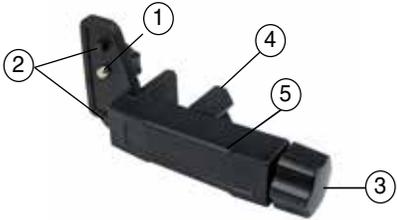

Attaching the Receiver to a Grade Rod

1. Use the alignment points to align the clamp to the back of the receiver.
2. Tighten the rod clamp screw
3. Turn the clamping screw knob counterclockwise to open the clamp's jaws.
4. Slide the survey rod or wooden pole between the clamp's jaws.
5. Turn the jaws screw clockwise to hold the general-purpose clamp securely in place.



Specifications

Accuracy	±1.0 mm (1/16 in.) ±2.0 mm (1/8 in.)
Working Radius* *Laser dependent	85 m (275 ft.)
Elevation Readout	Front and rear LCDs
Audio Control	Loud / Low / Off
Capture Height	80 mm (3.1 in.)
Marking Notches	60 mm (2.36 in.) below top of receiver
Power Source	2 AA alkaline batteries
Battery Life	40+ hours
Low-Battery Indicator	Battery symbol on LCD
Automatic Shutoff	30 minutes after last laser strike
Water / Dust Rating	IP66
Operating Temperature	-10 °C to 50 °C (-14 °F to 122 °F)
Storage Temperature	-20 °C to 70 °C (-4 °F to 158 °F)

Notice to Our European Union Customers

For product recycling instructions and more information, please go to: www.trimble.com/environment/summary.html

Recycling in Europe

To recycle Trimble WEEE, call: +31 497 53 2430, and ask for the "WEEE associate," or



mail a request for recycling instructions to:
Trimble Europe BV
c/o Menlo Worldwide Logistics
Meerheide 45
5521 DZ Eersel, NL

Request for Service

To locate your local dealer or authorized Trimble Service Center outside the U.S.A for service, accessories, or spare parts, contact one of our offices listed below.

North & Latin America
Trimble - Precision Tools
5475 Kellenburger Road
Dayton, Ohio 45424
U.S.A.
(888) 527-3771 (Toll Free)
+1-937-245-5600 Phone
+1-937-245-5490 Fax

Asia-Pacific
Trimble Navigation Singapore
PTE Ltd.
80 Marine Parade Road, #22-06
Parkway Parade
Singapore, 449269
+65 6348 2212 Phone
+65 6348 2232 Fax

Europe
Trimble Kaiserslautern GmbH
Am Sportplatz 5
67661 Kaiserslautern
GERMANY
Tel +49-(0)6301-71 14 14
Fax +49-06301-32213

Africa & Middle East
Trimble Export Middle-East
P.O. Box 17760
Jebel Ali Free Zone, Dubai
UAE
+971-4-881-3005 Phone
+971-4-881-3007 Fax

China
Trimble Beijing
Room 2805-07, Tengda Plaza,
No. 168 Xiwai Street
Haidian District
Beijing, China 100044
+86 10 8857 7575 Phone
+86 10 8857 7161 Fax
www.trimble.com.cn

Maintenance and Care

System Cleaning

For maximum performance and accuracy always keep the display and receiver windows clean. When cleaning, apply very light pressure and use only a good quality glass cleaner on a soft cloth to clean the exterior of the receiver and its windows.

CAUTION: A dry cloth or abrasive organic cleaner could scratch or damage these surfaces.

CAUTION: Do not submerge the receiver.

Warranty

Trimble warrants the HR1220 receiver to be free of defects in material and workmanship for a period of three years.

Customers should send products to the nearest Authorized Factory, Dealer, or Service Center for warranty repairs, freight prepaid. In countries with Trimble Service Subsidiary Centers, the repaired products will be returned to the customer, freight prepaid.

Any evidence of negligent, abnormal use, accident, or any attempt to repair equipment by other than factory-authorized personnel Trimble certified or recommended parts, automatically voids the warranty.

Special precautions have been taken to ensure the calibration of the receiver; however, calibration is not covered by this warranty. Maintenance of the calibration is the responsibility of the user.

The foregoing states the entire liability of Trimble regarding the purchase and use of its equipment. Trimble will not be held responsible for any consequential loss or damage of any kind.

This warranty is in lieu of all other warranties, except as set forth above, including an implied warranty merchantability of fitness for a particular purpose, is hereby disclaimed. This warranty is in lieu of all other warranties, expressed or implied.



Trimble - Precision Tools
5475 Kellenburger Road
Dayton, Ohio 45424-6383
U.S.A.

www.spectralasers.com